


Operating and Lighting instructions for Automatic Shut-off Valve. (ASV-1)

All Coppersmith lanterns that are supplied with an ASV-1 are also supplied with a gas pressure regulator. The ASV-1 and the gas pressure regulator are both installed in the lantern by our technicians and have been tested for proper operation.

- 1. Make sure the main gas supply to the lantern is turned on. This will not be on the lantern .
- 2. Depress the valve stem inside the lantern and rotate it to the vertical or on position.
- 3. Depress the plunger while using a long stem lighter to light the flame. Hold the plunger in for 3 to 5 seconds, release the plunger and the flame will stay lit.
- 4. If the flame is extinguished for any reason, the valve on the ASV-1 will close automatically halting the flow of gas.
- 5. Follow steps 1 through 3 to re-set the thermocouple.

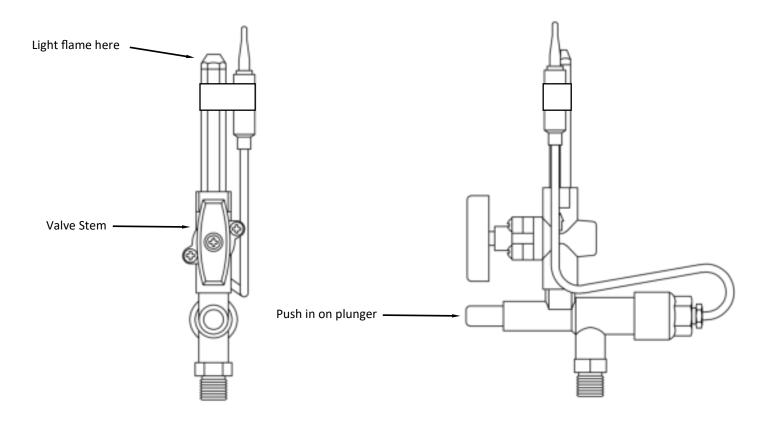

For technical assistance call:

215-621-3435