


The Coppersmith

Coach House Bars Installation Instructions

1. Read all of the instructions before beginning the installation.
2. Remove the package contents. There will be a total of 6 brass bars.
3. The 2 short bars are for the lantern door and the longer bars are for the right and left sides of the lantern.
4. Slide one end of the bar between the glass and the door or lantern frame as shown in **Figure 1** below.
5. Use one hand to pull up on the center of the rod and one hand to slide the opposite end of the rod between the glass and the lantern frame.
6. Lower the rod into place as shown in **Figure 2** below.
7. Repeat this procedure for the remaining bars.

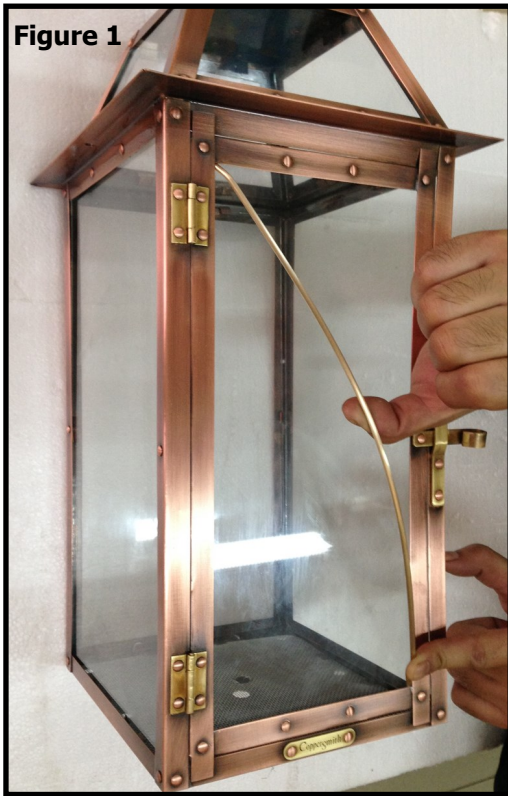


For technical assistance:

251.621.3435 Toll Free: 866.249.1918 www.thecoppersmith.net

The Coppersmith

Coach House Bars Installation Instructions

1. Read all of the instructions before beginning the installation.
2. Remove the package contents. There will be a total of 6 brass bars.
3. The 2 short bars are for the lantern door and the longer bars are for the right and left sides of the lantern,
4. Slide one end of the bar between the glass and the door or lantern frame as shown in **Figure 1** below.
5. Use one hand to pull up on the center of the rod and one hand to slide the opposite end of the rod between the glass and the lantern frame.
6. Lower the rod into place as shown in **Figure 2** below.
7. Repeat this procedure for the remaining bars.

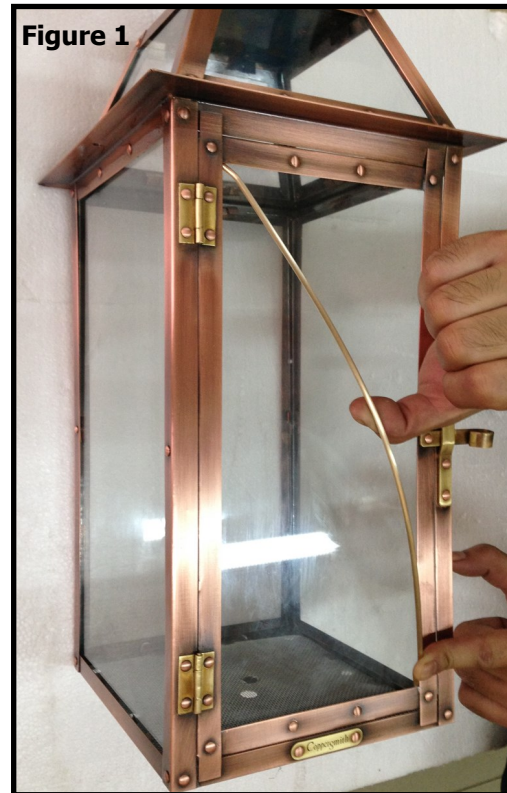

For technical assistance:

251.621.3435 Toll Free: 866.249.1918 www.thecoppersmith.net