



The CopperSmith

Gooseneck Bracket Installation Instructions


Installation should be performed by a licensed professional.

Refer to the Gas and Electric Lantern Installation Instructions included with the lantern before beginning the installation.

- 1. Remove the Gooseneck from the packing. (Figure 2)**
- 2. Remove the lantern from the packing. (Figure 1)**
- 3. Remove the lantern from the bracket by removing the 2 brass ball nuts on each side as shown in Figure 1. Re-install the fasteners to plug the hole in the lantern flange.**

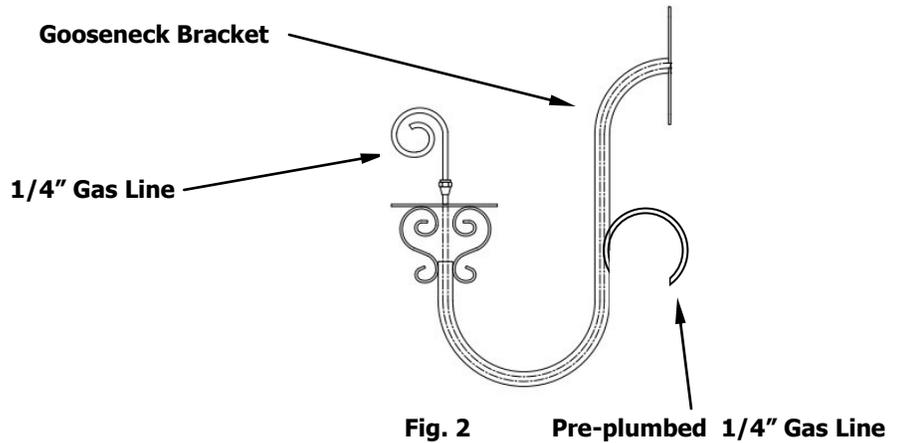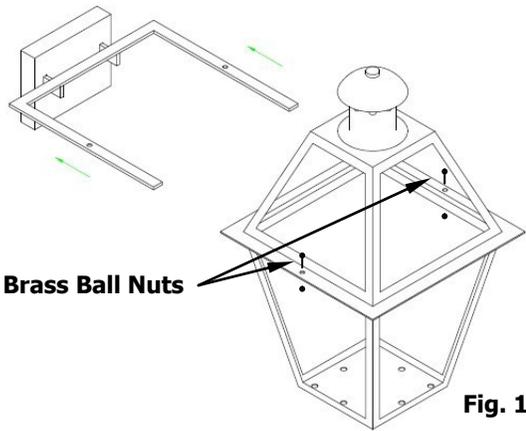

- 4. Remove the 90° fitting from the bottom of the lantern.**
- 5. Install the straight fitting provided with the gooseneck onto the bottom of the lantern.**

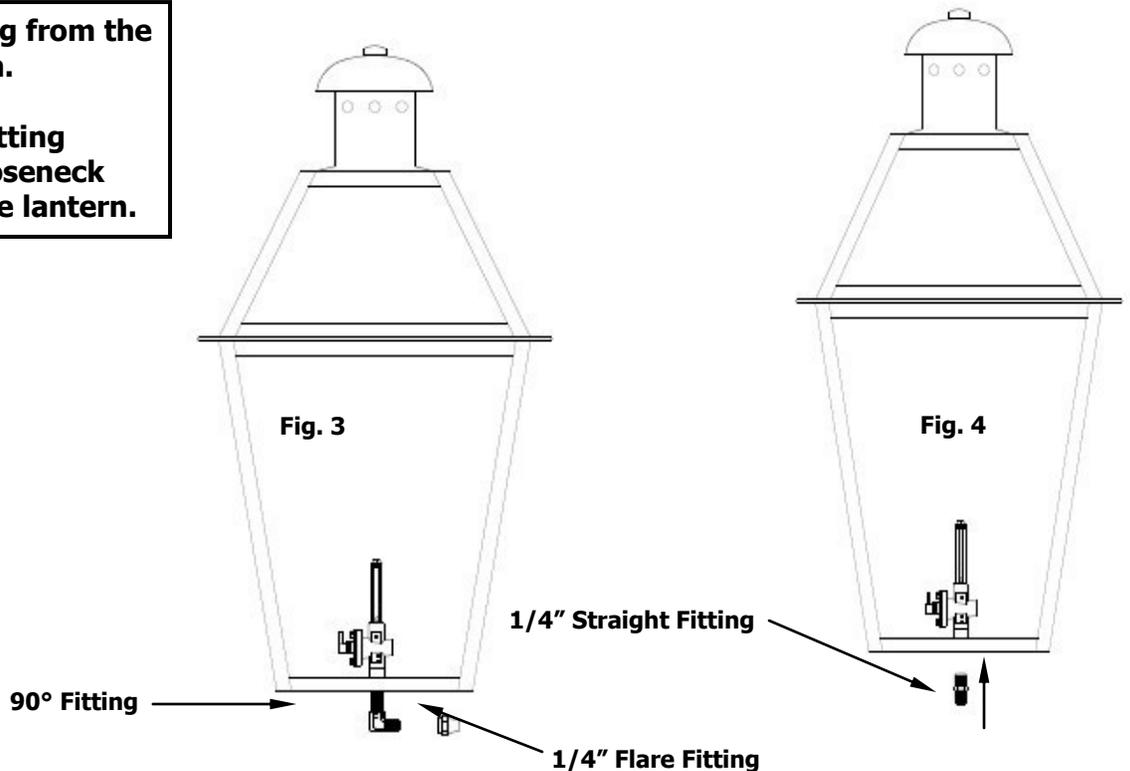

6. Connect the gas line from the Gooseneck onto the Bottom of the lantern. Figure 5.

7. Fasten the lantern onto the Gooseneck using the Bolts and nuts supplied. Figure 6.

8. Cut off the excess gas extending from the gooseneck pipe and install a 1/4" flare fitting.

9. Connect the gas supply line and Gooseneck gas line.

Gooseneck connection to Lantern using 1/4" flare fittings

10. Fasten the Gooseneck back plate to the mounting surface.

When attaching the back plate to the mounting surface the proper fasteners must be used for the material that the plate is being attached to.

Masonry anchors should be used for masonry surfaces. Wood screws of a suitable length should be used for wood surfaces.

When connecting to Drivet or Stucco surfaces you should consult the manufacturer to choose the best fastener options. For this reason, hardware is not included.

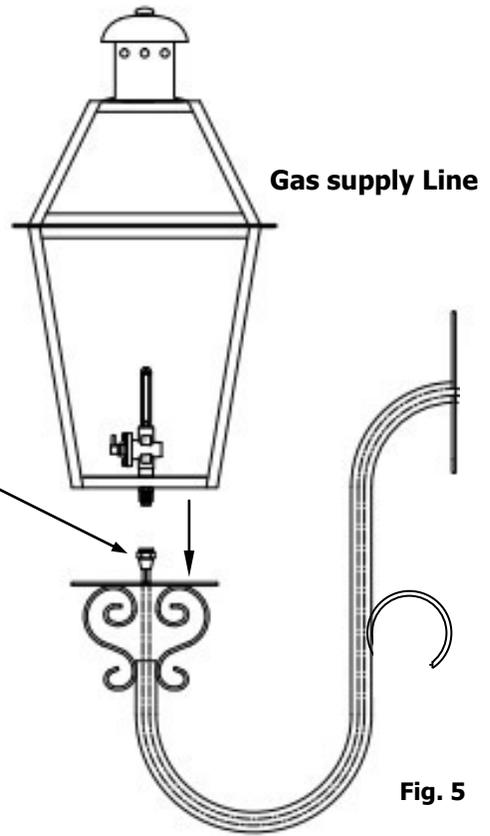


Fig. 5

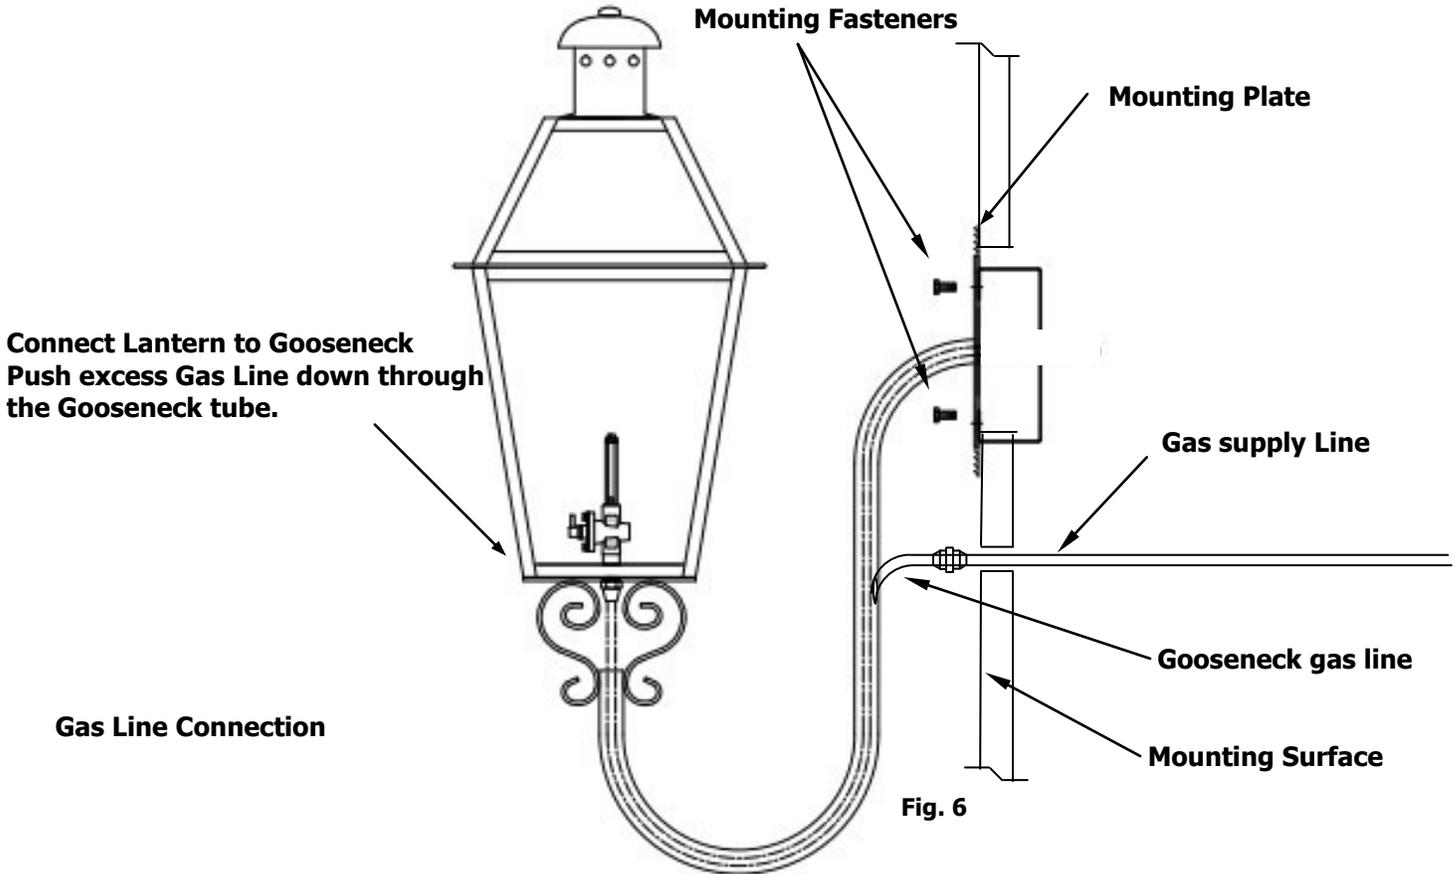


Fig. 6

**For additional technical assistance:
251.621.3435
TOLL FREE: 866.249.1918
Thank you for choosing The Coppersmith products.**