


The Coppersmith

Ladder Rest Installation Instructions

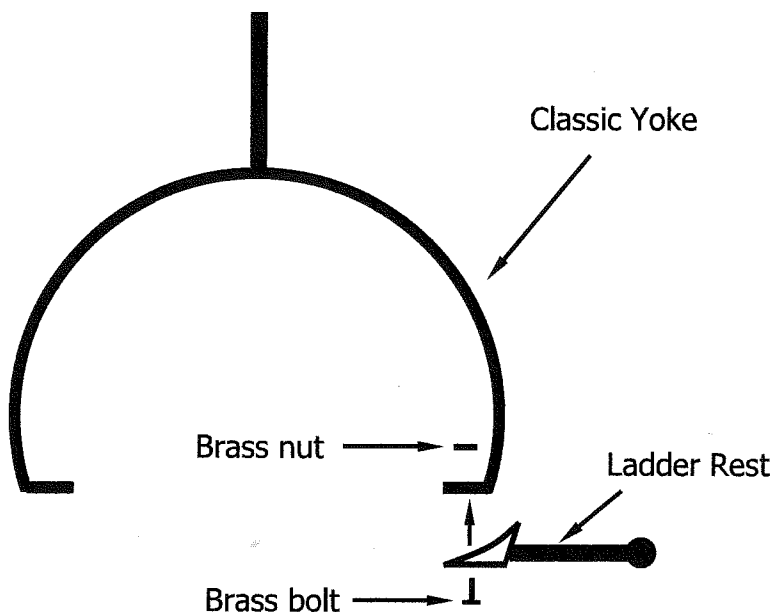

The ladder rests can be installed before the or after the Classic Yoke has been installed onto the lantern.

1. Connect the ladder rests onto the Classic Yoke by using the fasteners included as shown.
2. Repeat step 1 for the opposite side.

For additional technical assistance:

251.621.3435

TOLL FREE: 866.249.1918

Thank you for choosing Coppersmith products.