

The Coppersmith

London Bottom Installation Instructions

Electric Lanterns.

1. Remove the contents of the package and identify all of the parts shown in **Figure 1**. Read the instructions completely before beginning.
2. Install the Brass Clip (Part No.1) onto the electric wire tube as shown in **Figures 2 & 3**.
3. Install the threaded nipple (Part No. 2) into the bottom of the brass clip and secure in place using the brass nut (Part No.3) as shown in **Figure 4**.
4. Slide the copper finial (Part No. 4) onto the brass nipple. Make sure the slot in the finial fits over the electric tube as shown in **Figure 4**.
5. Slide the copper finial (Part No. 5) onto the brass nipple and secure both copper finials into place using the ball nut. (Part No.6) **Figure 5**.

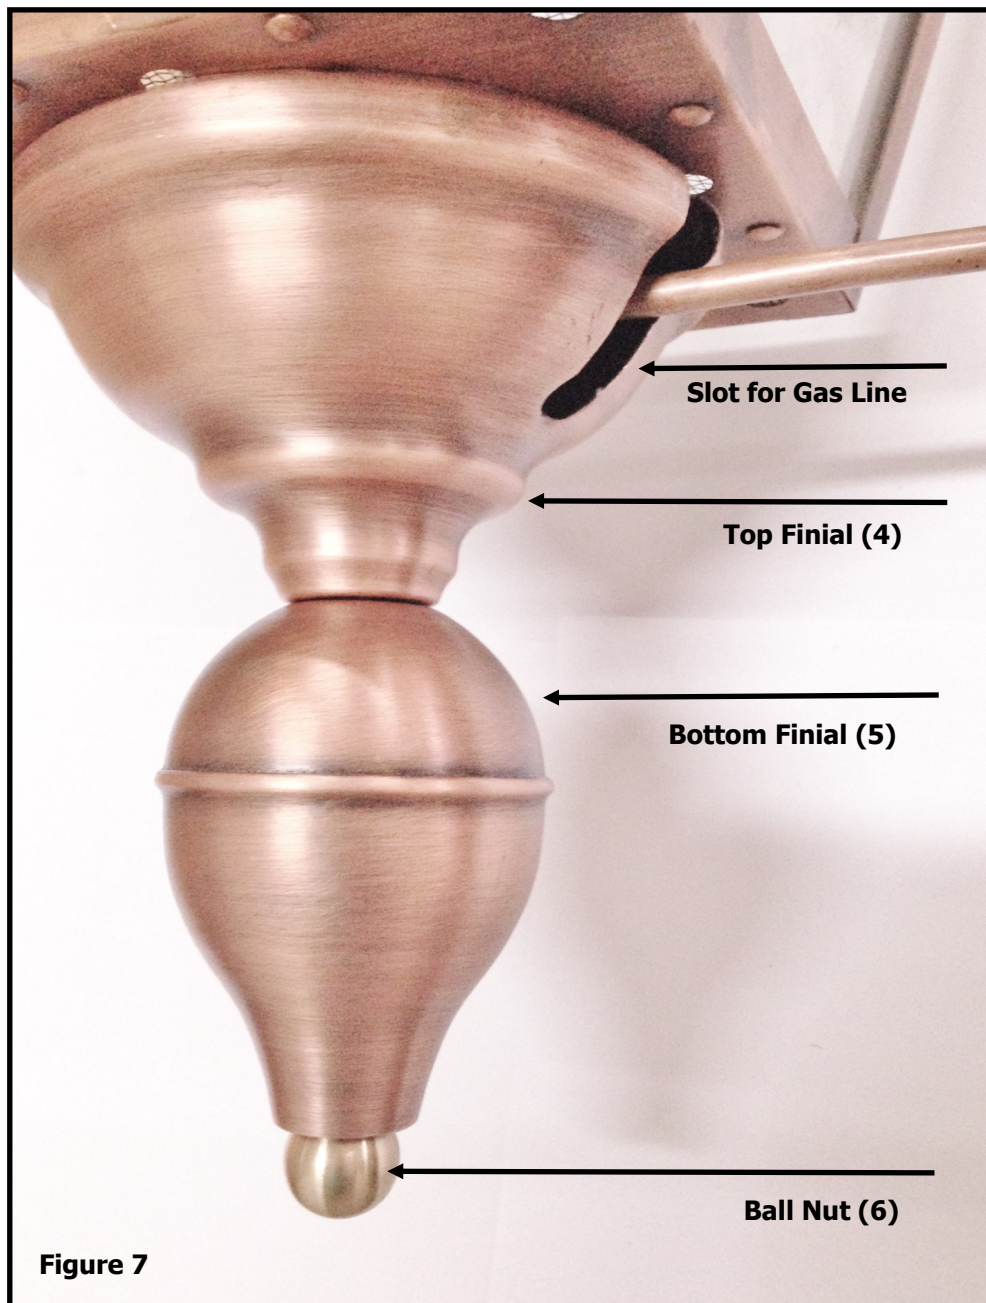


Figure 7

For Technical Assistance:

251.621.0509 Toll Free: 866.249. 1918

www.thecoppersmith.net

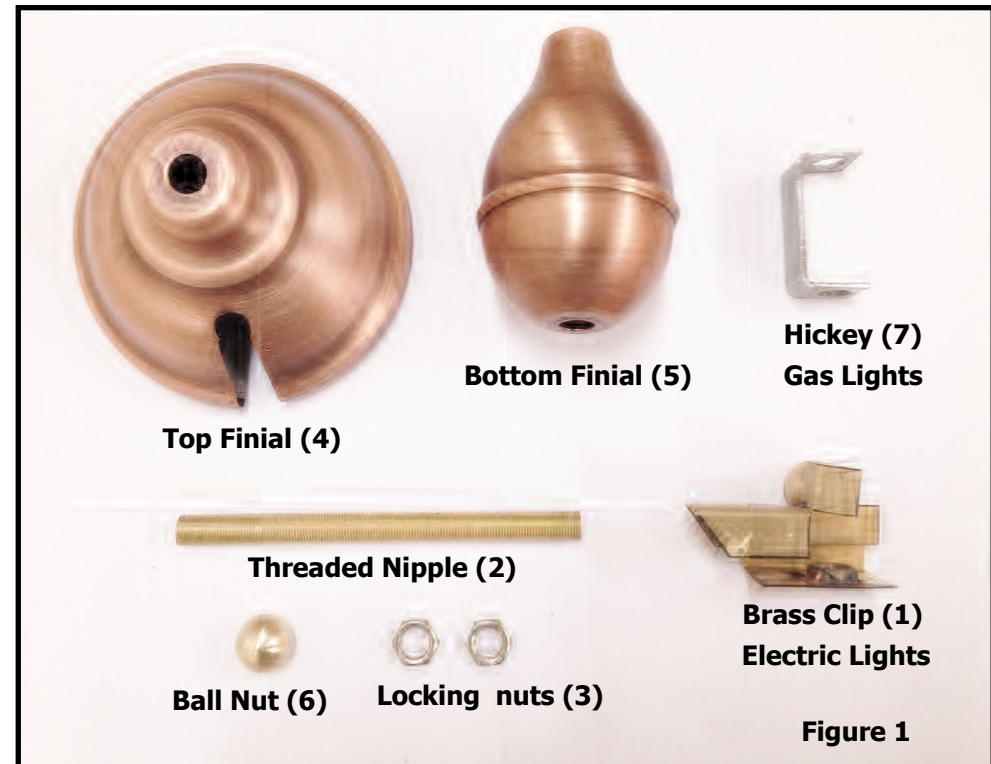


Figure 1

Gas Lanterns.

Note: Installation of the London Bottom on Gas Lanterns should be performed by a licensed professional

1. Remove the contents of the package and identify all of the parts shown in **Figure 1**. Read the instructions completely before beginning.
2. Remove the gas valve and install the Hickey (Part No.7) as shown in **Figure 6**.
3. Install the threaded nipple (Part No. 2) into the bottom of the Hickey and secure in place using the brass nut (Part No.3) as shown in **Figure 6**.
4. Slide the copper finial (Part No. 4) onto the brass nipple. Make sure the slot in the finial fits over the gas line as shown in **Figure 7**.
5. Slide the copper finial (Part No. 5) onto the brass nipple and secure both copper finials into place using the brass nut. (Part No.6) **Figure 8**.

